


## OPTIONAL Auto Vent HELPSHEET

Please read ALL before you begin.

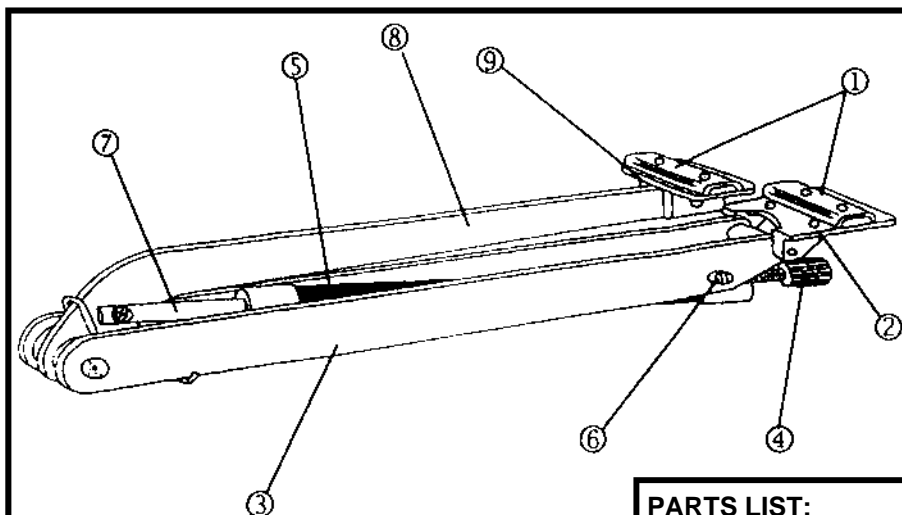

### PARTS LIST:

- 1 Gripping Channels
- 2 Gripper
- 3 Lower Arms
- 4 Adjusting screw
- 5 Cylinder
- 6 Studs
- 7 Piston Rod
- 8 Upper Arm
- 9 Window Bracket

When fitting your 'Autovent (AV)' please consider the following in conjunction with the manufactures instructions.


For your 'AV' to be most affective then it should roughly follow the pitch of the roof. The holes in the gripper allow for some adjustment.

The 'AV' is supplied with numerous fittings to accommodate various aluminium and wooden greenhouse models.


**IMPORTANT:** In aluminium models with pre-punched holes in the vent slam bar the 'AV' is designed to clamp onto the slam bar lip. It is **NOT** designed to use the holes which are punched.

**General fitting:** (see options on the right, plus full instructions on the manufacturers sheet.)


1. Simply clamp the upper arm to the middle of the vent bottom rail via the window bracket (9).
2. Move the 'AV' to best follow the pitch of the roof.
3. Attach the bottom gripper (2) through the holes best suited to your greenhouse model.

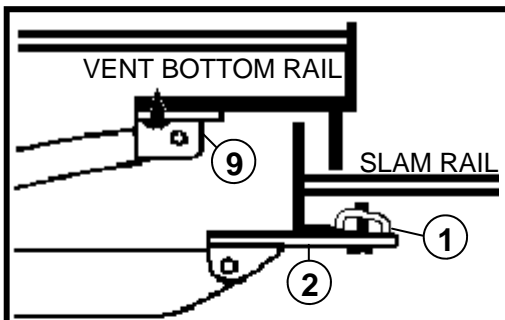


Screw and Clamp option

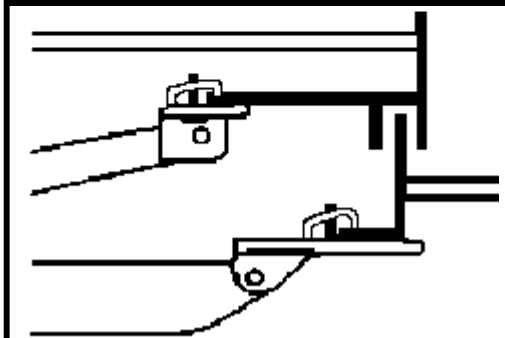

Double Clamp option 1

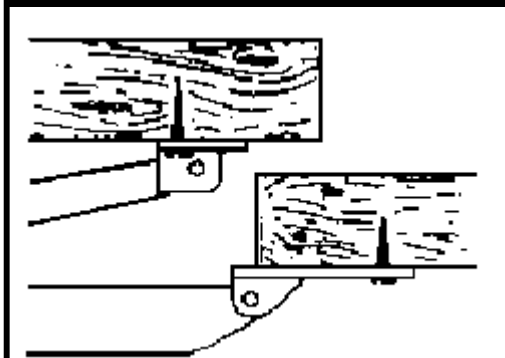

Double Screw option

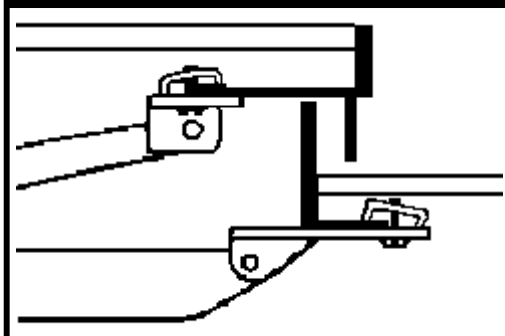

Double Clamp option 2  
(most common)

