


## Victorian Extensions Assembly Instructions



NOMINAL SIZE	(mm)					
4ft extension	1240					
6ft extension	1860					
8ft extension	2480					
10ft extension	3100					
12ft extension	3720					

Issue 1.1

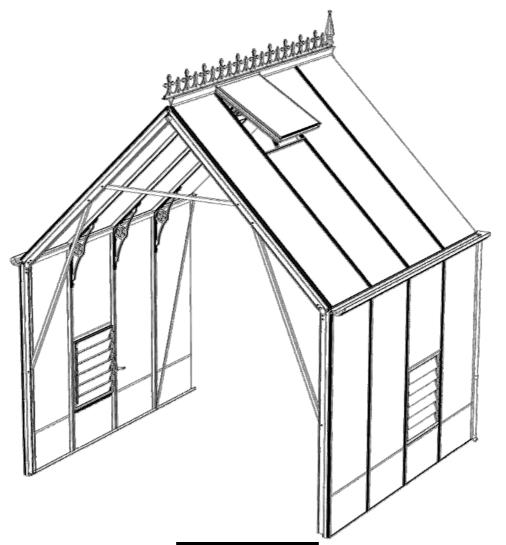

Thank you for purchasing your new Robinsons greenhouse. We recommend you familiarise yourself with the instructions and read all safety information before you commence assembly. This instruction manual is also available online at www.robinsonsgreenhouses.co.uk in our technical help section should you need to reprint it. Should you require any additional advice you can always call us on 01782 385409.

These instructions are to be used in conjunction with the main instruction manual (read them before this manual):

#### **Safety Warning**

- Glass and aluminium can potentially cause injury. Please ensure you wear protective goggles, gloves, headgear and suitable footwear when assembling and glazing the building.
- Please remember that glass is fragile and should be handled with extreme care. Always clear up and dispose of any breakages immediately.
- Do not assemble the greenhouse in high winds.
- For safety reasons and ease of assembly, we recommend that this greenhouse is assembled by a minimum of two people.
- Please clear all lying snow from the greenhouse roof as it can cause the roof to buckle or collapse.

#### **Site Preparation**


- When selecting a site for your greenhouse, it is vital that you choose as flat and level an area as possible.
- A concrete or slabbed base will provide the most solid foundation for your greenhouse.
- IMPORTANT: Do not fix your building down until the building is fully assembled, including glazing.
- Avoid placing your greenhouse under trees or in other vulnerable locations.
- To minimise the risk of wind damage, try to select as sheltered a site as possible, e.g. beside a hedgerow or garden fence.


#### **Additional Considerations**

- Please bear in mind that assembling your greenhouse can be time consuming. You may need to spread the construction over two or more
  days. We recommend that you avoid leaving the building partially glazed. If you ever have to leave your greenhouse half assembled and not
  anchored down, weigh it down with slabs or bags of sand to stop the wind moving it.
- You will find it helpful to prepare a large, clean and clear area in which to work in. A garage floor or flat lawn area is ideal.
- If you have arranged for someone to install your greenhouse for you, please check that all components are included. Some parts are numbered and can be identified by a stamped or hand written number (without the 'D'). Alternatively, the components can be identified by their distinctive profiles, lengths and quantities detailed in the parts list.
- Anchoring down your greenhouse should be the final stage of construction (including glazing).
- Once installed your greenhouse requires little maintenance, but to maintain the smooth running of your door(s) WD40 or similar can be applied to the door wheels and lower door guides.

#### Guarantee

Your new Robinsons greenhouse is guaranteed for 10 years against faulty manufacture of the framework. This does not include glazing, moving parts, accidental damage or wind damage.

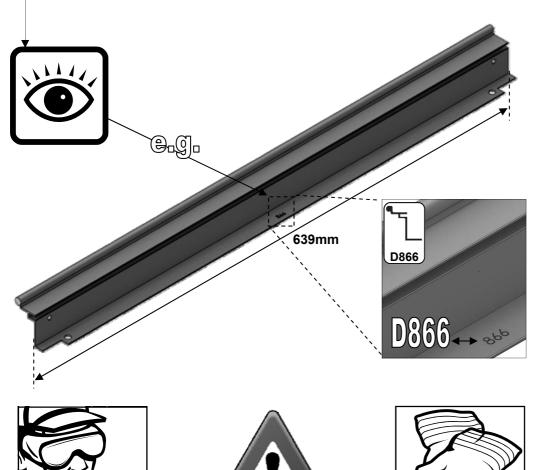

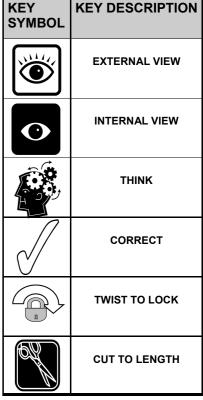



PLEASE CONTACT US FOR A BASE PLAN FOR ANY MODIFICATIONS i.e. Drop door/s, dwarf wall, partition, etc...) NOT LISTED ON THIS PAGE.

MPORTANT: IF YOU HAVE ANYTHING OVERHANGING THE RIDGE ON A LEAN-TO, PLEASE ALLOW HEIGHT CLEARANCE FOR THE ROOF VENT.




THE FOLLOWING DIMENSIONS ARE THE EXACT EXTERNAL BASE DIMENSIONS FOR THE ROBINSONS RANGE.

We cannot emphasis how important it is to have a proper base for your Robinsons Greenhouse to be erected upon.

It is essential that the BASE IS FLAT, LEVEL AND SQUARE AS WELL AS BEING SUBSTANTIAL enough to take the weight of the greenhouse including its 4mm glass.

**IMPORTANT**: Do not anchor your greenhouse down until it is fully assembled including glazing unless you are 100% sure your base is square and level. If not your glass will not fit properly.


Give yourself enough room around your base to allow for fitting the glass and any on-going maintenance / cleaning. A slab base which is larger than the greenhouse is the ideal solution.

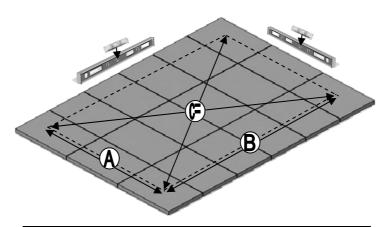

#### THE BASE MUST BE FLAT, LEVEL AND SQUARE.

A brick perimeter base is equally suitable providing there is a concrete foundation beneath it. We suggest using a solid brick with no frogs or holes (quality stock bricks or semi-engineering bricks). A brick plinth is an advantage because it minimises the chances of any water running back underneath the base cill.

**Note,** when calculating the length of a unit that has an extension you must add the main module dimension to give you the overall length. See diagram below.

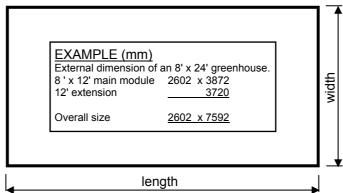


#### **VICTORIAN ROBINSONS EXTENSIONS VERY IMPORTANT INFORMATION:**

If you have been supplied with an extension (i.e. your building is longer than 12'), your main building will differ in that the roof end and corner glazing bars (on the end to which the extension will be fitted) are replaced with side and roof glazing bars from the extension module kit. These should be fitted using 15mm bolts. In addition, it will be necessary to slide additional 10mm bolts into each side bar and roof bars to accommodate a reinforcing channel (10mm bolts must be used here, 15mm bolts will get in the way when fitting the square a-frame tubing). You only need four side diagonal braces per building (two each side), move the two (currently on main sides) nearest the extension join towards the rear.

Be careful not to mix up your extension cills and gutters. There will be a separate gutter and cill for the left and right side extensions. In addition one set of holes in both the gutter, cill, and ridge sections are slightly closer together (<u>586mm instead of 620mm</u>). When fitting the extension ridge, gutters and side cills, the 586mm hole centres at one end of the extension components must abut the main greenhouse. Each of the extension joining plates should be initially attached to the main building and then onto the 586mm spaced hole end of each extension section.


IMPORTANT: Each glazing bar centre should then be 620mm apart. If not your glass will not fit properly. See next pages 6 and 7 for more details.


Part	Section	Size	4'	6'	8'	10'	12'						Pa		Sec	tion	Size	4'	6'	8'	10'	12'
No.		(mm)	EX	EX	ΕX	EX	EX	]					N	0.			(mm)	EX	EX	EX	EX	EX
L	EFT HAND	SIDE_I	EXT	ENS	1018	1		Ī						R	IGHT	HAND	SIDE	ΕX	TEN	ISIO	Ν	
D075L		1240	1										D07	5R			1240	1				
D029L		1860		1									D02	9R	1		1860		1			
D024L		2480			1								D02				2480			1		
D025L	, ,	3100				1							D02		•		3100				1	
D026L DV241L		3720	1				1						D02				3720	1				1
DV241L DV217L		1240 1860	1	1				- !				1	DV2				1240 1860	1	1			
DV217L	-54	2480			1			₹⊿		-		<b>X</b>	DV2	_	\	, ]	2480		'	1		
DV215L		3100				1		11/	/ 				DV2		1 1		3100				1	
DV216L		3720					1			REAR	N	M	DV2				3720					1
								ייו	_;	FRONT	. II	VIII.										
<u>ر</u>										TROINT												
Ŵ				Γ	Pa	rt	Se	ectio	n	Size	4'	6'	8'	10'	12'							
nsions Parts Lis					No					(mm)	EX	ĒΧ		EX	EX							
					D1	14				N/A			2									
<u></u>					וט	14		6 6	ì	IN/A			2									
				-	D1	36	1	$\overline{}$	u 	1546			2									
Œ					וט	50		Ш		1040			_									
					D1	74		A		N/A	2	4	6	8	10							
								0	)													
(N)																						
								R	B		_		_									
					DΛ	100		//			2	4	6	8	10							
(N)																						
					DV	153	*	6.4		N/A	4	4	4	4	4							
					٠,	.00						·										
<del></del>					DV	227	-		7	N/A			2									
							1															
															<u> </u>							
		<b>T</b>									r						₩_					
Part	Section	Size			6' EV	8' EV	10' EX	12' EX				Pa		S	ection				6'	8' 5Y		12'
No.		(mm	i) E	X	EX	EX	EX					N	0.			(m	m) E	X	EX	EX	EX	EX
	DV	VARF :	SIDI	ES											ST	ANDA	RD S	IDE	S			
D673		111	4			2						D	131		[	1	630			2		
					1										4 6						ı	
Deno	րԱպ	116	_	,	6	0	10	10				_	000		цΨ	1 .	076		_	_	4.0	40
D609		116	U	4	6	8	10	12				D	066			1	676	4	6	8	10	12
		100	0													# A	000					
RUBBER	$\nabla$	(1m		10	14	20	26	34				RUI	BBER		Q		000 1m)	14	22	28	34	42

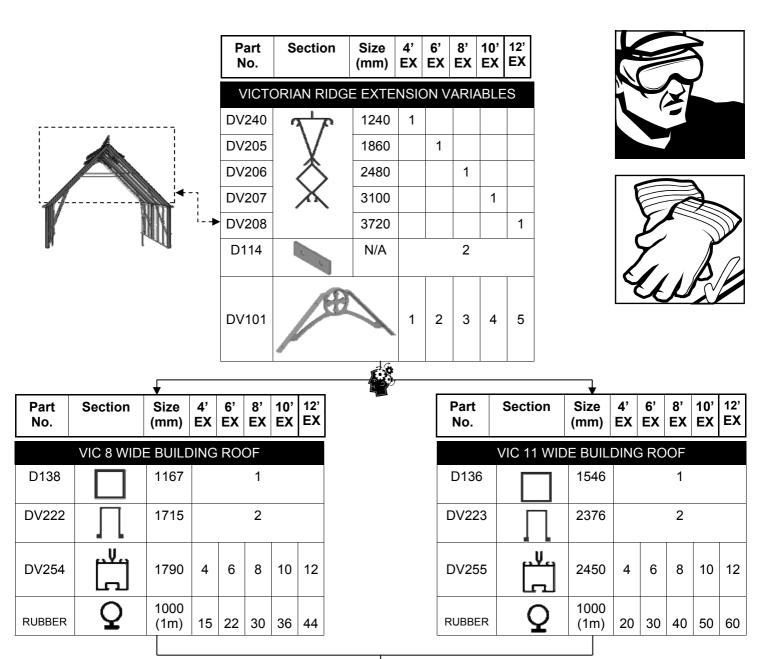



		$\forall$							
Part No.	Section	Size (mm)	4' EX	6' EX	8' EX	10' EX	12' EX		
FS6006		35mm	6						
FS6504		M6 S/S	6						
SYBOLM6X11		10mm	60	66	72	78	84		
SYBOLM6X15		15mm	10	12	14	16	18		
SYBOLM6X22		22mm	12	24	36	48	60		
SYNUTM6		М6	82	102	122	142	162		


# Free-Standing & Dwarf Extensions

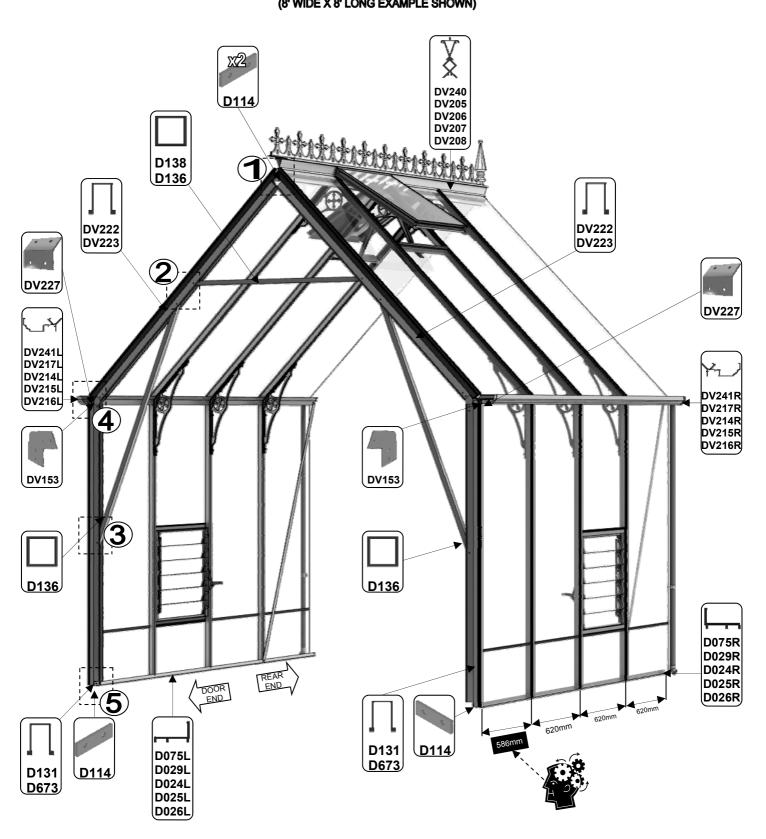


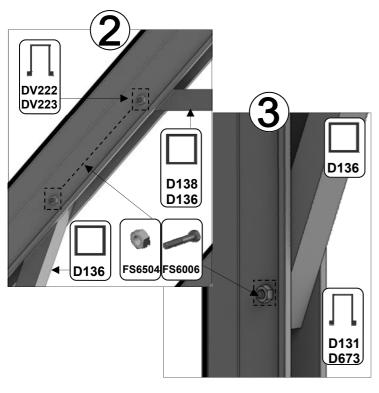


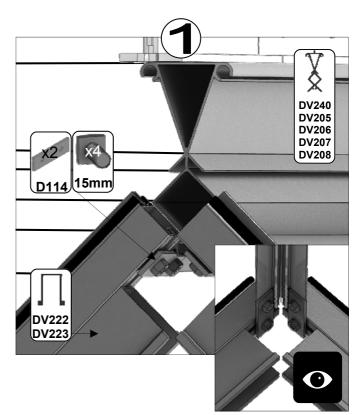

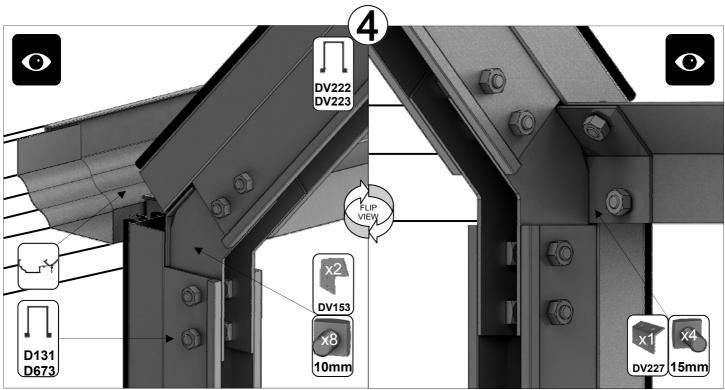

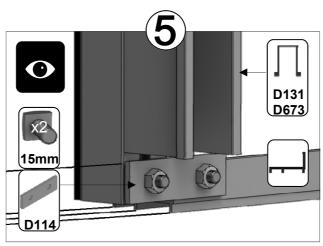

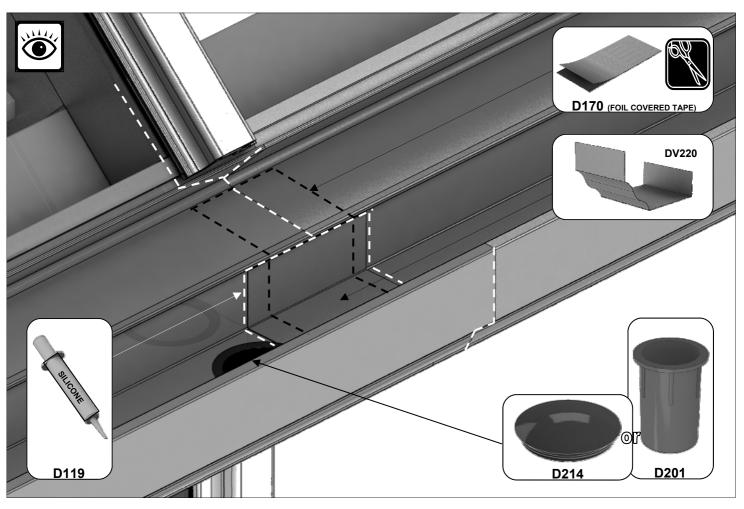


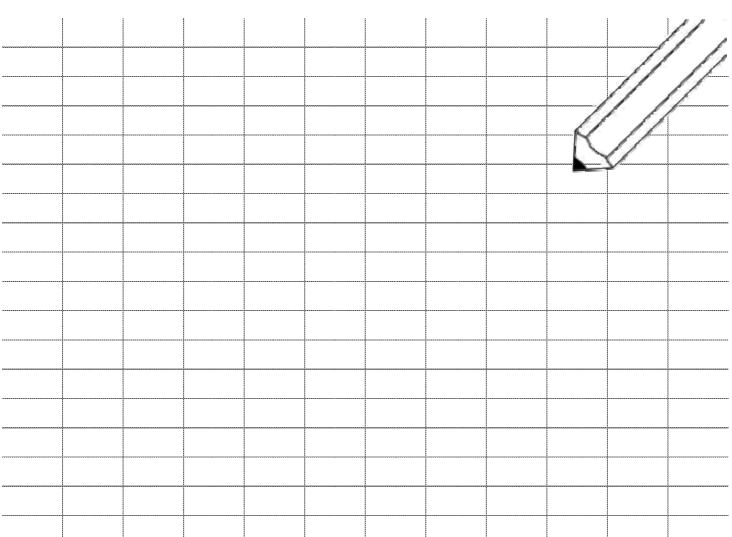

### Staging around A-frames






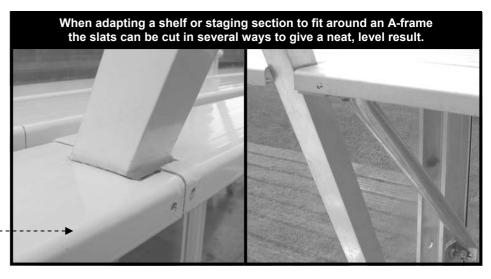








Fitting Robinsons slatted **shelving** and **staging** using the instructions is usually quite straight forward. However if you have chosen a greenhouse which includes **A-frames** or a **partition** then fitting the staging becomes more complicated. In these instances some additional adaptation brackets where A-frames are included, and some side height vertical bracings for a





partition.



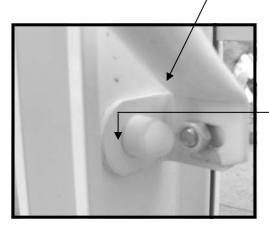

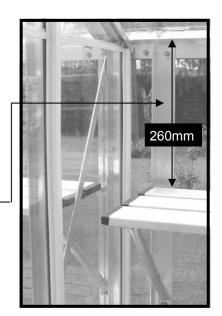

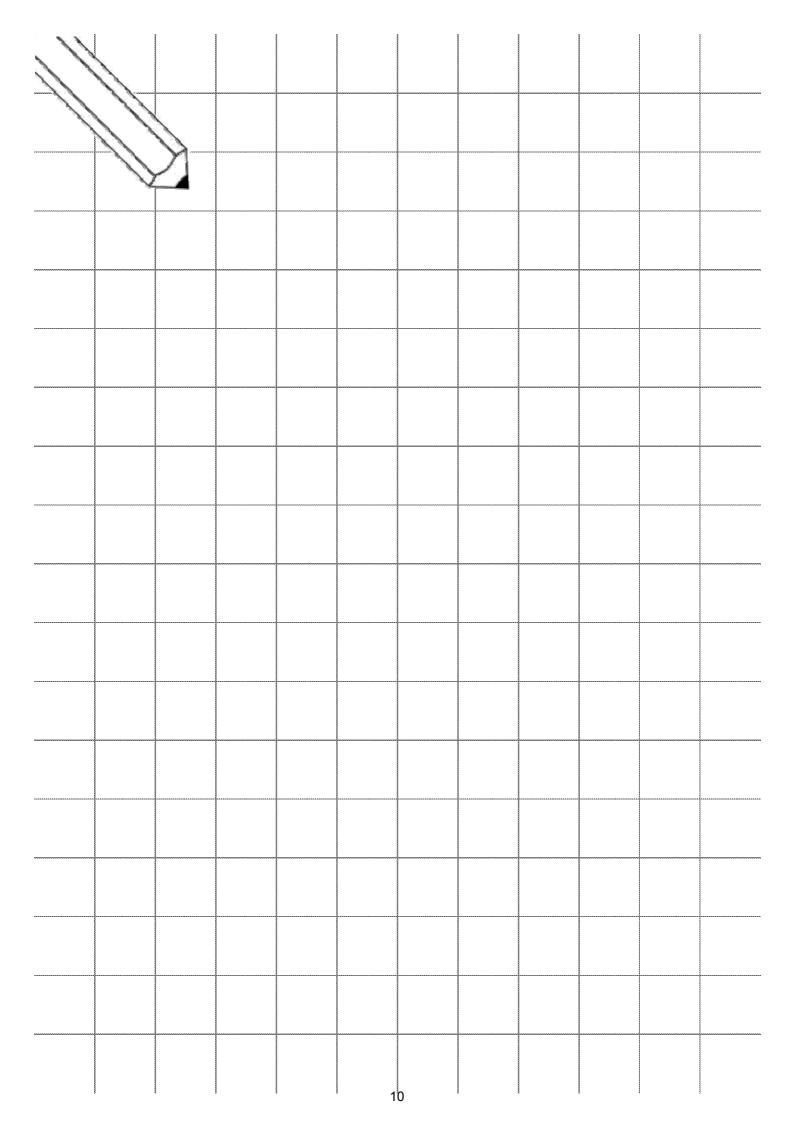

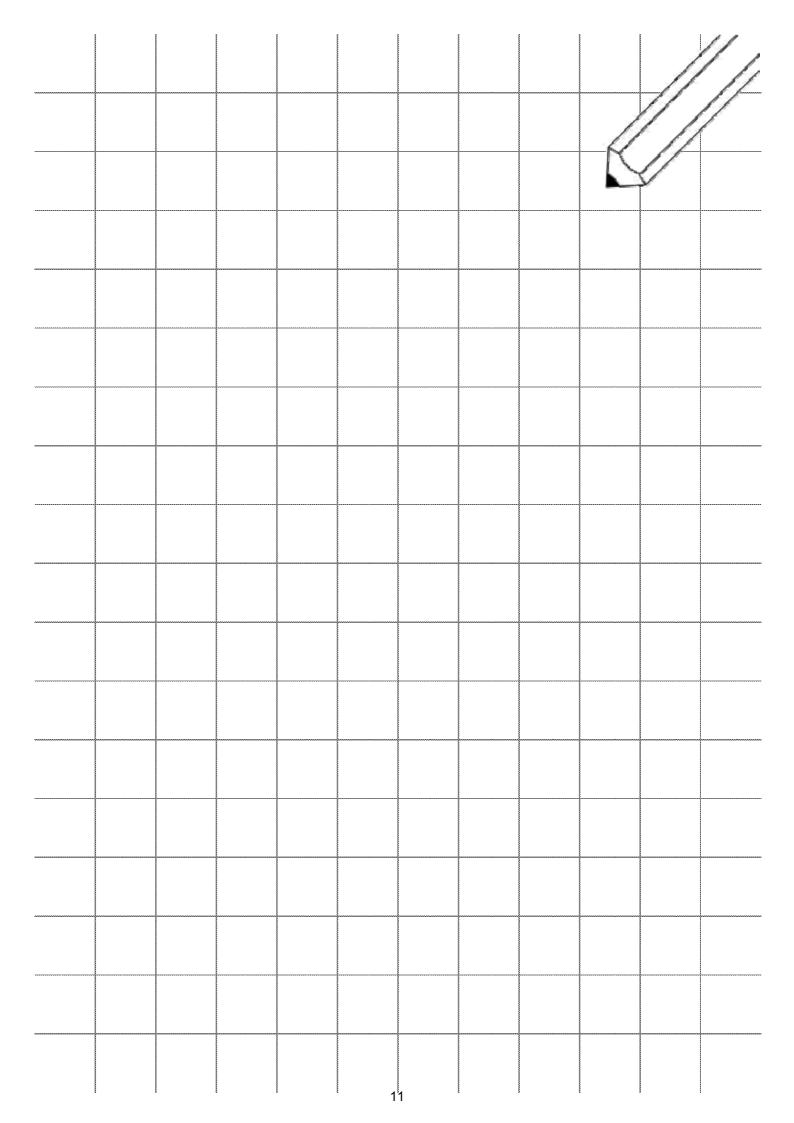

Please be aware that this is a multi-national manual, if you spot any errors or have any constructive comments regarding the manual please email james.spooner@greenhousepeople.co.uk and I will make the necessary amendments. Whilst the information contained in this booklet is accurate at the time of publication, changes in the course of Robinsons policy of improvement through development and design might not be indicated. We point out this fact to avoid any infringements of the Trade Descriptions Act and also to advise that Robinsons Greenhouses reserve the right to change specifications and materials without prior notice.

In addition any photographs of completed buildings would be most appreciated to add to our portfolio.

THIS GREENHOUSE BOX WAS PACKED BY:	DATE:



www.robinsonsgreenhouses.co.uk

To contact Robinsons Customer Services email us at <a href="mailto:sales@robinsonsgreenhouses.co.uk">sales@robinsonsgreenhouses.co.uk</a> or call us on 01782 385 409.

Our address is Robinsons Greenhouses, Unit 19 Blythe Park, Cresswell, Stoke-on-Trent, Staffordshire, ST11 9RD